



Removal

- 1 Pull spring clip energetically down with water pump pliers and turn to the **left** by 90°.

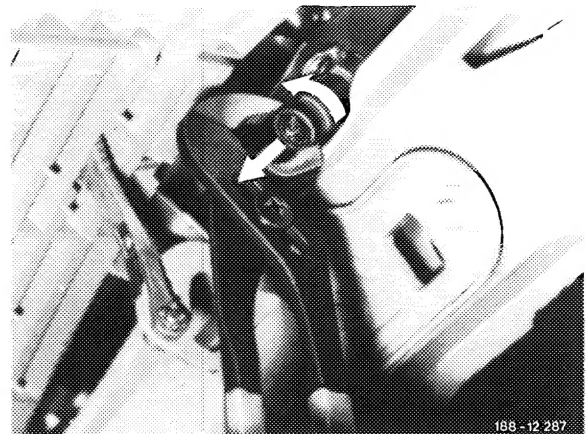

- 2 Make sure that the spring clip enters into the two grooves of the rosette.
- 3 Pull Mercedes star out of radiator shell in upward direction.

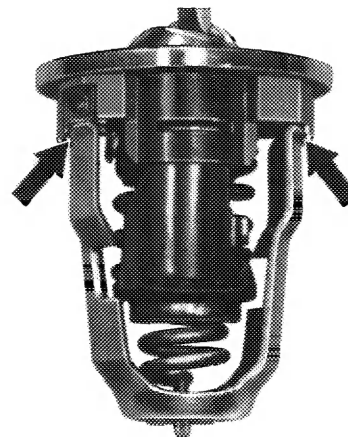

Installation

- 4 Insert Mercedes star into radiator shell and turn spring clip with water pump pliers by 90° in **clockwise** direction.